



How to upgrade firmware of Cudy Router?

1. Unzip the firmware zip file.
2. Power ON Cudy device, wait for LED become solid.
3. Connect to Cudy's network via WiFi or Ethernet.
4. Open a web browser and go to **<http://cudyre.net/>** or **<http://192.168.10.254>**

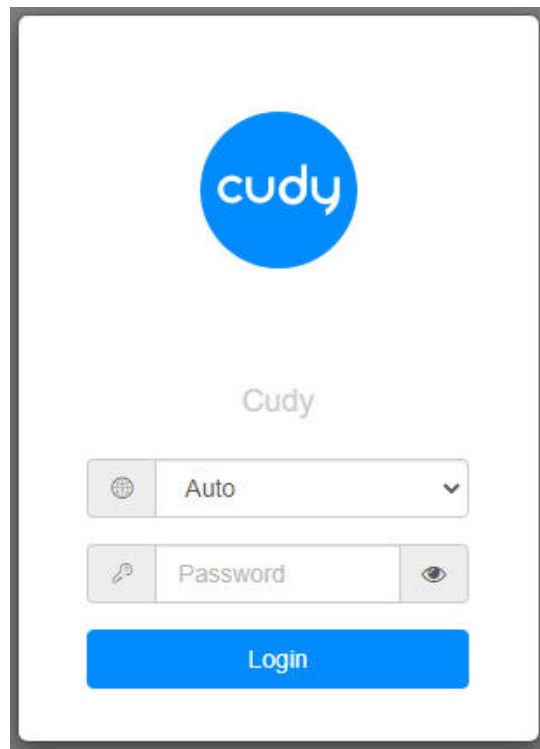

5. Use ***admin*** as password to login.
6. Go to ***Advanced Settings -> Firmware***, Choose the firmware you unzipped to upload.

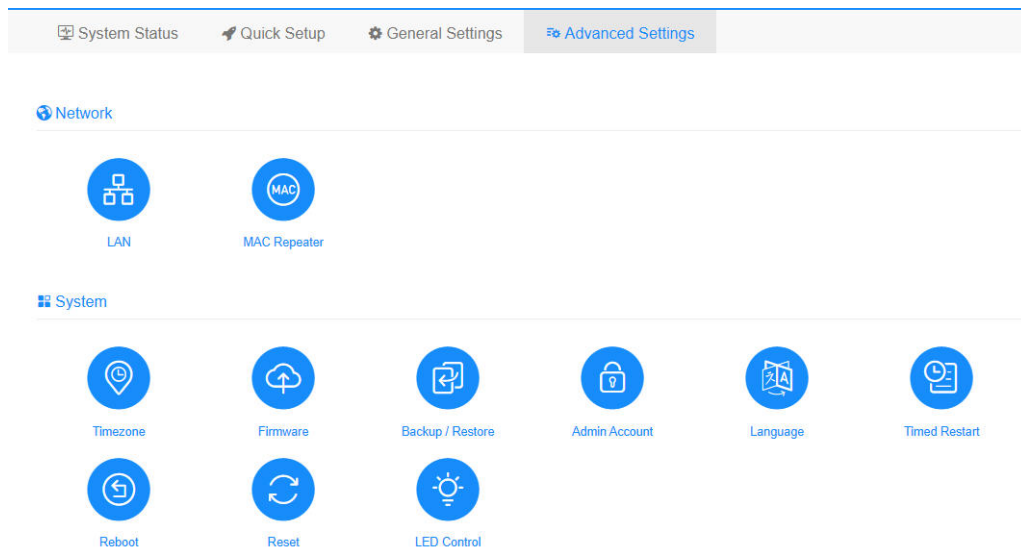

8. Waiting 5 minutes for the extender restart.