


How to upgrade firmware of Cudy WR1500?

1. Unzip the firmware you download.
2. Power on the WR1500, wait for about 1 minute, the sys LED become solid.
3. Connect to the WR1500 via Wi-Fi or Ethernet.
4. Open a web browser and go to <http://cudy.net> or <http://192.168.10.1> to open the login page of WR1500.

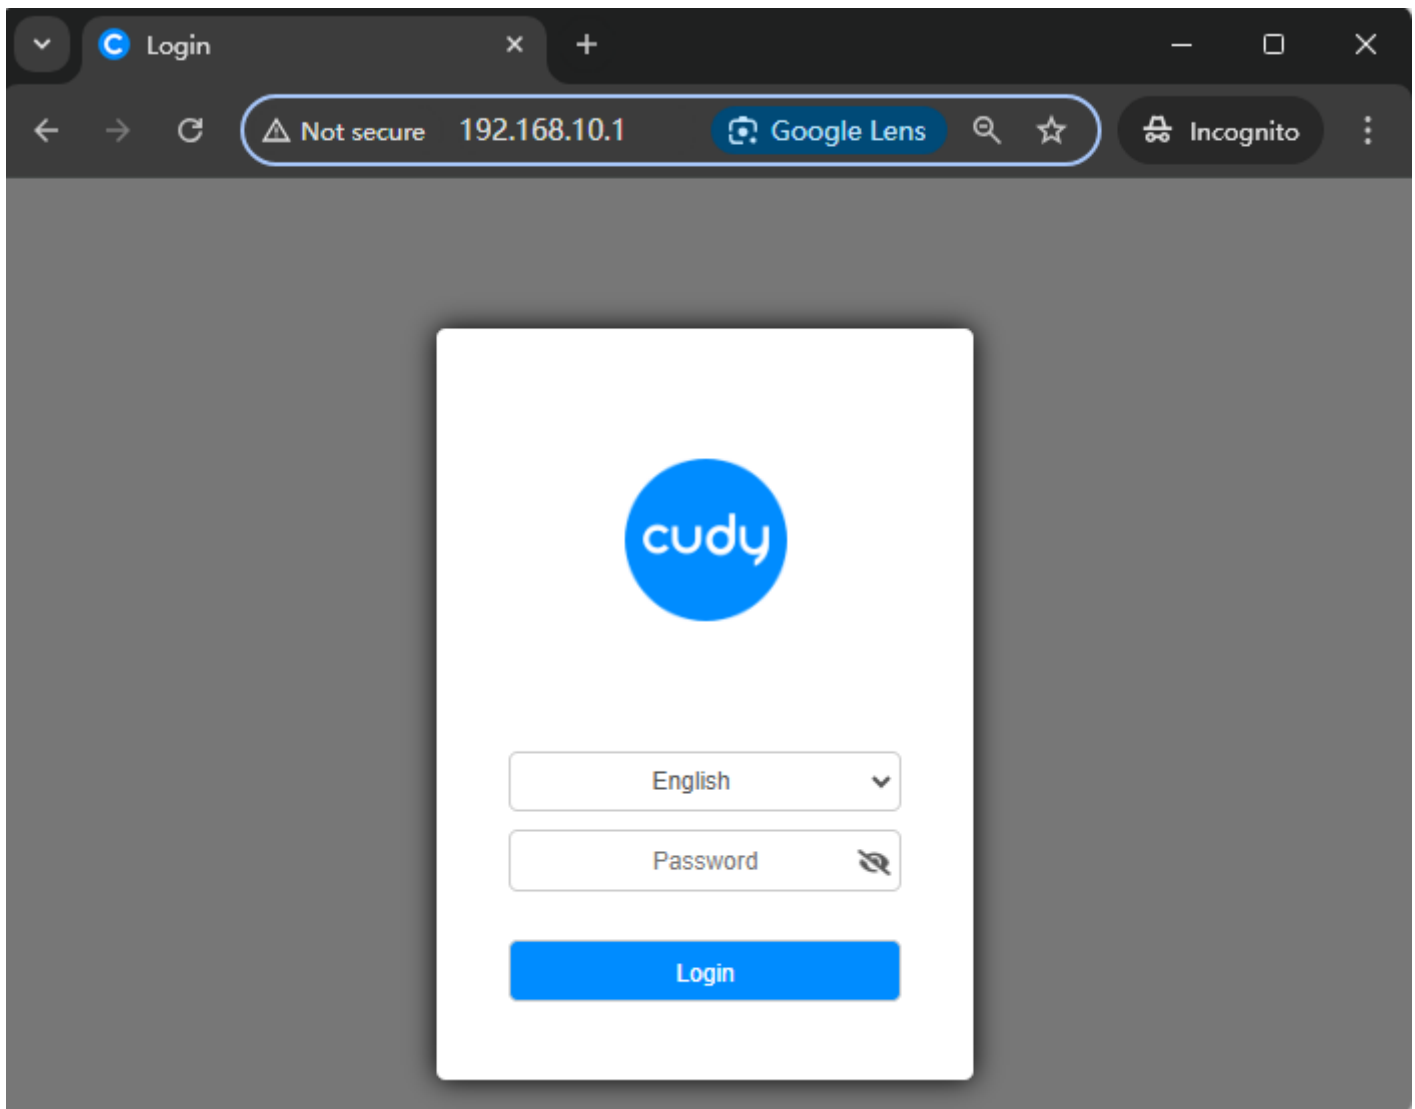

5. Input the password you set to login to the web management page of the router. Go to "Management" -- "Firmware" page, click "Choose File" to upload the new firmware and update. Wait about three minutes, the update will be finished.

cudy

Quick Setup

Wireless 5G

Wireless 2.4G

Network

Firewall

Management

System Status

DDNS

TimeZone

Log

Firmware

Save/Reload Settings

Admin Account

Logout

Firmware Upgrade

This page allows you to upgrade the firmware. Please note, do not power off the device during the upgrade as it may crash the system.

Firmware Version:

1.0.0-20230922-259373

Select File:

Choose File

No file chosen

Upload

Note: The new firmware changes a lot of functions. So we suggest you reset the router to factory default and reinstall it again.